

## Keysight E8362B (PNA) Connection & Setup

### Firmware Supported

To check your firmware version refer to your manual or restart your Network Analyzer, the firmware number will appear on the LCD.

Rev. A.07.50.09


### Note

E8362B model tested.

### Setup Requirements

Go to System, Configure, SICL/GPIB/SCPI set SICL to enable  
Check mark "Automatically Enable on Start up"  
Check mark "LAN and Sockets/Telnet"

### Connections

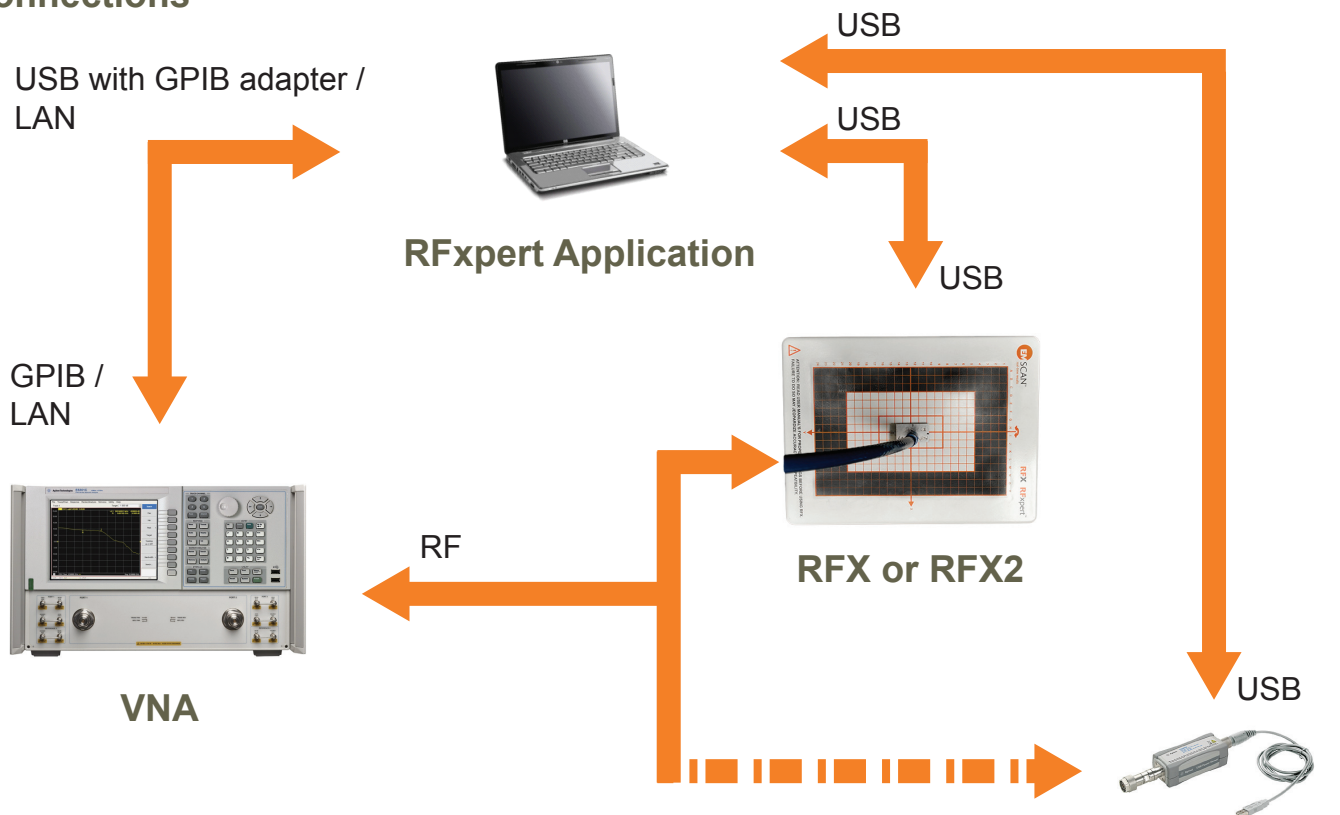

Power Meter  
**RFxpert**<sup>™</sup>