

## Rohde & Schwarz FSH 4/8 Connection & Setup

### Firmware Supported

To check your firmware version refer to your manual or restart your Network Analyzer, the firmware number will appear on the LCD.

### Options

FSH.28 (8GHz with VSWR bridge) or FSH.24 (4GHz with VSWR bridge)

FSH-K42 (Vector reflection measurements)

FSH-K40 (USB or LAN interface)

### Connections

