

Rohde & Schwarz ZVL3 and ZVL6 Connection & Setup

Firmware Supported

To check your firmware version refer to your manual or restart your Network Analyzer, the firmware number will appear on the LCD.

Rev. 3.21

Connections

