

## TECHNICAL BULLETIN # 18

December 19, 2012

To: EMxpert users with Agilent N9912A (Firmware version A.05.53 or older)


Re: Registry update to run scans down to 50kHz instead of the current 100kHz lower limit with Agilent N9912A on EMxpert

EMSCAN is pleased to provide EMxpert customers with Agilent N9912A (Firmware version A.05.53 or older) with a free bug fix. This fix will update the EMxpert registry file to allow EMxpert software to run scans down to 50kHz instead of the current 100kHz lower limit. Please contact EMSCAN Technical Support to receive registry file.


This technical bulletin describes the steps to update registry file.

### Windows 7


- Unzip file "N9912A reg\_update\_W7"
- Double click "N9912A reg\_update\_W7"

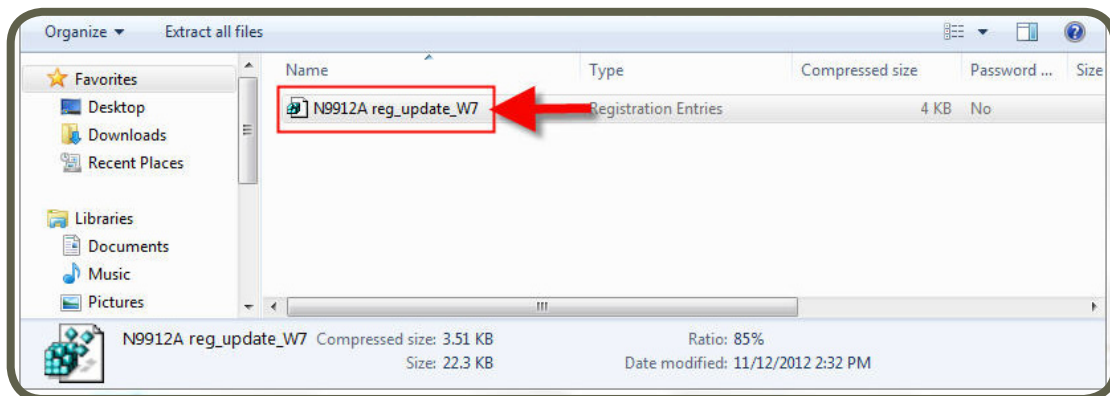

- Click "Yes"

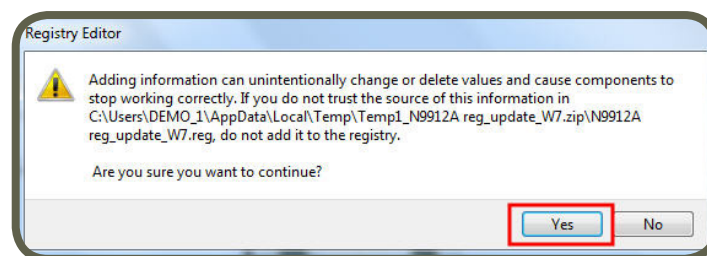


- Click "Ok"

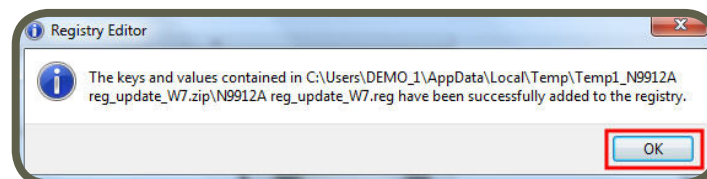


## Windows XP

- Unzip file "N9912A reg\_update\_XP"
- Double click "N9912A reg\_update\_XP"

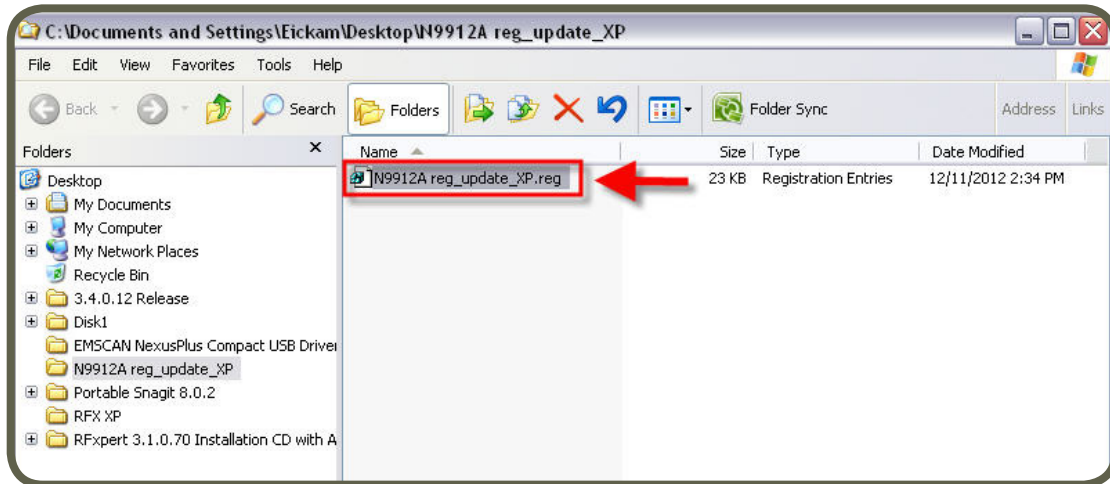

- Click "Yes"

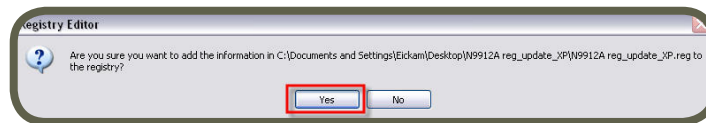

- Click "Ok"

